


Installation Instructions - FMP (Form Mounting Plate)




1. Remove existing cap from coupler.

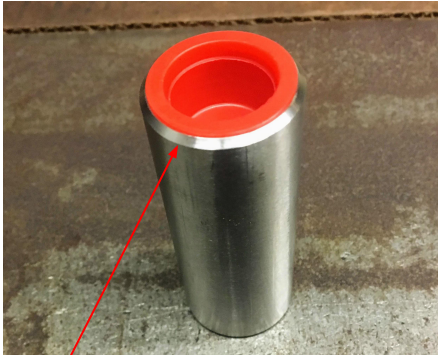

2. Verify correct FMP plate to match coupler. (FMP45 for #4 and #5 and FMP67 for #6 and #7)



3. Insert coupler into FMP and press fit coupler fully into FMP. Coupler should be flush with FMP base

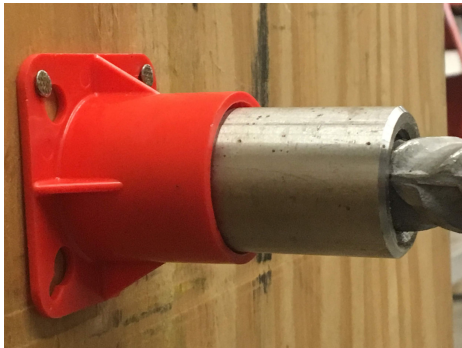

4. Use nail holes to mount FMP to wooden form. Ensure FMP is secured properly to prevent movement prior or during pour.



5. After the forms are stripped, use a screwdriver to remove plastic tab from FMP



6. Visually inspect the threads to ensure that threads are clear of dirt/debris or concrete. Verify for correct male rebar. Insert and properly torque male rebar into FMP and coupler

Warning:

All instructions must be completely followed to ensure proper and safe installation and performance.

The customer is responsible for: Conformance to all governing codes; The integrity of structures to which products are attached, including their capability of safely accepting the loads imposed as evaluated by a qualified engineer; Using appropriate industry standard hardware as noted

Safety Instructions:

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat and gloves as appropriate to the application

RHINO products shall be installed and used only as indicated in RHINO's product instruction sheets and training materials. Instruction sheets are available at www.rhinoconnections.com and from your RHINO customer service representative. Improper installation, misuse, misapplication or other failure to completely follow RHINO's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death and/or void your warranty.